

# User Manual

48W Car Wireless FM Transmitter

Model	JR-CL16
Name	48W Dual-Microphone Car Wireless FM Transmitter
BT Version	V5.0
Input	DC 12-24V
QC3.0 output	5V3A 9V2A 12V1.5A
PD output	5V3A 9V3A 12V2.5A 15V2A 20V1.5A
PPS	3.3-11V3A, 3.3V-16V2A
Total output	48W
Size	50*45*70mm
Color	Black
Net weight	44g

JOYROOM

# Packing list

**Parameters** 

Brand

FM transmitter \*1, User Manual \*1, Warranty Card \*1

# Dual microphones 8 Positive power contact

9 LED display

(3) Previous

① Type-C charging port

① QC3.0 charging port

(12) USB flash drive port

Product introduction

Working status indicator

Multifunctional button

Negative power contact

③ BASS button

5 Light button

(4) AUX port

# **Operation instructions**

1. Wireless connection a. Plug JR-CL16 into the b. Tune the car cigarette lighter socket car radio to a

frequency, long press the Knob button, adjust FN transmitter to th Same Frequency with car radio. Note: Blank frequency refers to frequencies with no vocals or music, just rustling. c. Turn on your phone's d. After pairing successfully, you

blank FM



### 2. USB flash drive connection a. Plug JR-CL16 into the car b. Tune the

FM **106.8** MHz cigarette lighter socket . car radio to a blank FM frequency, long press the Knob button, adjust FM transmitter to the Same Frequency with car radio.

Note: Blank frequency

refers to frequencies with no vocals or music, just rustling.

c. Insert USB flash drive d. After connecting successfully, into the USB flash drive you can start to play music. port. The QC3.0 port does not support USB flash drive.



# 3. AUX connection

AUX port.

(AUX cable not included)

a. Plug JR-CL16 into the b. Turn on your phone's BT car cigarette lighter socket. function and find the name "CL16" to pairing.



c. Insert the AUX cable into d. After connecting successfully







# CL16 AUX port and the car you can play music/start phone





Short press 6, the "b" indicator light on LED display will light up, which means BASS mode is started.

\*\* Wireless/USB flash drive mode switch \*\* Press and hold for 2s to switch between wireless/USB flash drive mode.

#### \*\* Battery voltage detection function \*\* When the CL16 is inserted into the cigarette lighter, the LED

Abnormal

Q: What is blank frequency?

makes rustling current static noise.

range

12V <11.6V or >14.8V 11.6V-12.8V 11.6V-14.8V

24V <23.2V or >27.2V 23.2V-25.6V 23.2V-27.2V

A: A blank frequency is a non-working frequency which

Q: Why is there a noise when playing music in the car?

A: Make sure the car radio is turned on and the car radio

frequency is consistent with the FM frequency. Besides, you

have to adjust it to the local blank frequency when using.

Normal range | Normal range

before start up after start up

Long press the multifunctional button 6 , the LED display will start to flash after 2s; rotate the knob leftward/ rightward to display will indicate the current car voltage. When the car voltage is in an abnormal range, it is recommended to replace the car battery or carry out maintenance;

#### \*\* Volume adjustment \*\*

select frequency.

\*\* Frequency adjustment \*\*

If you feel the music volume is too low, you can: 1. Volume up your phone:

#### 2. Volume up the FM transmitter by rotating the multifunctional button; 3. Volume up the car audio.

#### \*\* Answer/reject/end calls \*\*

Answer a call: short press the 6 button; End a call: short press the 6 button during the call; Reject a call: Long press the 6 button for 2s.

## \*\* Playing music \*\*

Press K button to skip to previous song; Press > button to skip to next song; Press multifunctional button of to pause; Press 🜈 again to resume playing.

#### \*\* Sound effect switch \*\*

#### Q: Why can't the phone be charged fast? A: Check whether your phone supports the charging protocol

of the product, and whether the charging cable used supports fast charging.

Q & A

 
#### Q: Why CL16 failed to be connected wirelessly while it can be found on the phone?

- A: ① Check whether the phone's BT function is turned on and works normally.
- Check whether the BT indicator is always on. If it is always on, it means that other devices are connected, and you need to disconnect other devices to connect. If the problem still cannot be solved, please delete all the BT names from your phone and reconnect.
- Q: Why can't music on the phone be played through the car
- A: Check whether the transmitter is connected to the phone's BT, and whether the frequency of the transmitter is the same as that of the car.
- Q: Can the song last played be remembered when playing with a USB flash drive?
- A: Yes. The product can remember and automatically switch to the song last played.
- Q: Can the light of CL16 be turned off?
- A: Yes, just short press the light button to turn it off.
- Q: Is it safe to charge a phone with CL16?
- A: Yes, it's safe as long as you follow the instructions. The product is designed with multiple protections inside.

# Cautions:

- 1. Please charge your device after the car engine starts.
- 2. Do not charge high-power devices to prevent device damage caused by excessive power.
- 3. It is normal for the device to emit electromagnetic noise when passing through tunnels or areas with poor signal. 4.If the sound is not clear or the connection is unsuccessful when you arrive at the new city, please re-adjust the car FM frequency to the blank frequency, and then reconnect to use;
- 5. Do not use it in wet environment or thunderstorm weather.
- 6. Do not clean it with strong chemicals, cleaning agents, etc.
- 7. Do not drop or throw it violently and please keep it from
- collision considering this product is an electronic product. We hope you never have the need, but if you do,

# our service is friendly and hassle-free.



1. Activate the lifetime warranty for you!

2. If you need help, our solutions will hyper drive to you within 12 hours.

























